

Product Information & Installation Guide

Removable Bollard Surface Mount Keyed Alike



SKU: REMBOLSMKA

Description: Removable Surface Mount Bollard

Material: Galvanised Steel

Height: 1000mm

Weight: 13kg

Diameter: 90mm

Thickness: 3mm steel wall

Finish: Hot dip galvanised, Yellow Powder Coating, Class 1 Red Reflective Strip

1 X Base Plate Receiver Included


Installation Guide

You will need:

- A hammer drill with a 14mm masonry drill bit
- The M10 screw fixings supplied with the bollard.
- A 17mm socket
- A hammer
- A hand broom or industrial vacuum (optional)

What to do:

1. Read all the instructions from beginning to end first.
2. Determine exactly where the bollard will be placed. Place the bollard with the base plate receiver attached into the position you would like it to be in when it is in its locked position. Then without moving the position of the base plate, remove the bollard by unlocking the key and turning it anti-clockwise from one of the triangle marks to the other. Lift the bollard away from the base plate.
3. If you are installing more than one bollard, it is a good idea to mark the ground to ensure that you have a straight line to assist you with the correct placement of your bollards.
4. Using your hammer drill, drill a guide hole in the concrete through each hole in the base plate receiver using the 14mm masonry drill bit. (This is to mark the surface so that you know where to continue to drill).
5. Remove the base plate receiver and brush or vacuum away the concrete dust.
6. Continue to drill each guide hole to an approximate depth of 120mm.
7. Brush or vacuum away the concrete dust.
8. Put the plastic plug component of the fixing in the drilled hole and hammer in.
9. Place each base plate receiver over the holes, line up and put the supplied M10 screws through the base plate receiver and into the plastic plugs.
10. Use your 17mm socket to tighten the M10 screws. Be careful not to overtighten the screws.
11. Before attaching your bollard onto the base plate receiver, ensure that the key is always turned to the unlock position before being placed onto the base.

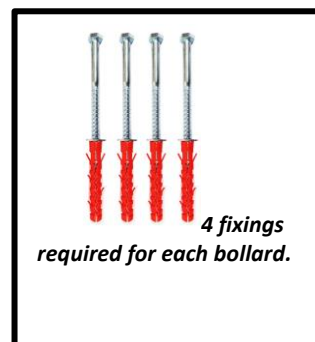

Important- When removing the bollard from the base and storing, gently rest the bollard on the ground after removal from the base plate. Do not allow the bollard to hit the ground with force as this will cause irreparable damage to the locking pin. Ideally, hanging [\(Bollard Storage\)](#) is the best storage method for this bollard when not locked into the base plate.

For a seamless installation, ensure your bollard is placed on a flat surface.

Safety Xpress recommends you put the safety of yourself and others first when installing your bollard. Please be mindful of using and wearing the correct safety gear.

