



PRODUCT PLACEMENT GUIDE

WHEELSTOPS - AS2890.1:2004


PARKING FRONT FACING INTO A HIGH KERB OR WALL

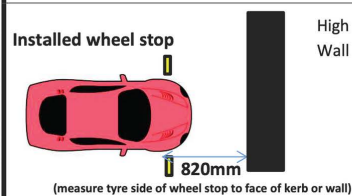


PARKING REAR FACING INTO A HIGH KERB OR WALL

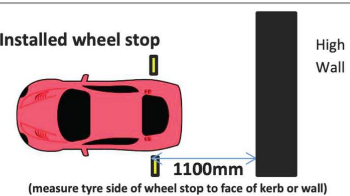

PARKING FRONT FACING INTO A LOW KERB

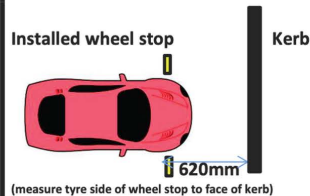


PARKING REAR FACING INTO A LOW KERB

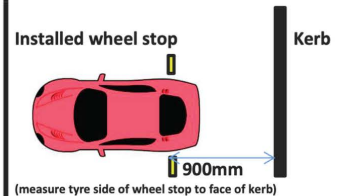

Two Truck Wheel Stops are installed next to each other to form a 2.5m long Truck Stop.

As every truck has varying dimensions, installation of the truck stops and the distance from kerbs, walls and other obstacles will be individual for every circumstance.

DISABLED PARKING - AS2890.6

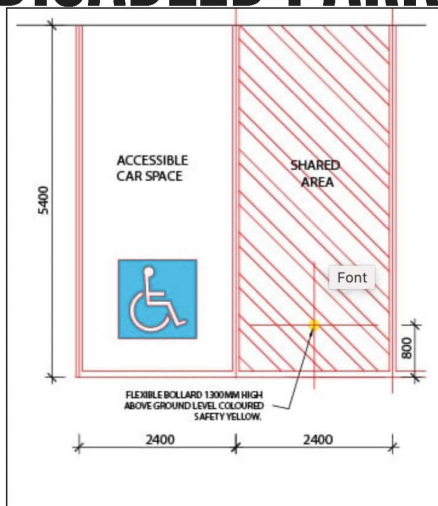

Disabled parking bays must include a shared common space for safe transfer to and from vehicles. Vehicles equipped to enable side access for wheelchairs and other mobility devices require sufficient clearance. The common areas can be on either side of the parking bay, or it can be shared between two spaces.

Bollard Placement:

Flexible Bollard 1300mm high above ground level coloured Safety Yellow

TIP: FOR A SEAMLESS INSTALLATION, ENSURE YOUR PRODUCTS ARE PLACED ON A FLAT SURFACE




Safety Xpress recommends you put the safety of yourself and others first when installing your products. Please be mindful of using and wearing the correct safety gear.



PRODUCT PLACEMENT GUIDE

PARKING PROTECTOR BOLLARDS

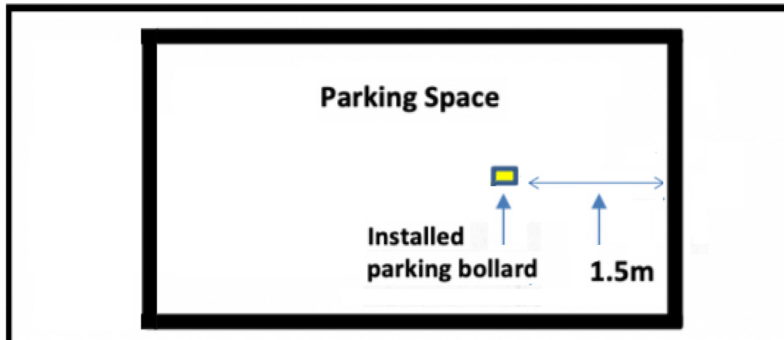

The Parking Protector Bollards should be installed 1.5metres from the backline of the parking bay. Then your bollard won't be at risk of getting run over and damaged.

Note: Illustration dimensions not to scale.



TIP: FOR A SEAMLESS INSTALLATION, ENSURE YOUR PRODUCTS ARE PLACED ON A FLAT SURFACE

Safety Xpress recommends you put the safety of yourself and others first when installing your products. Please be mindful of using and wearing the correct safety gear.

WWW.SAFETYXPRESS.COM.AU