

OVER CAR BONNET STORAGE LOCKER INSTALLATION MANUAL


Contents

Product Features & Specifications	Page 2
Parts Drawing.....	Page 3
Installation Instructions.....	Page 4-8

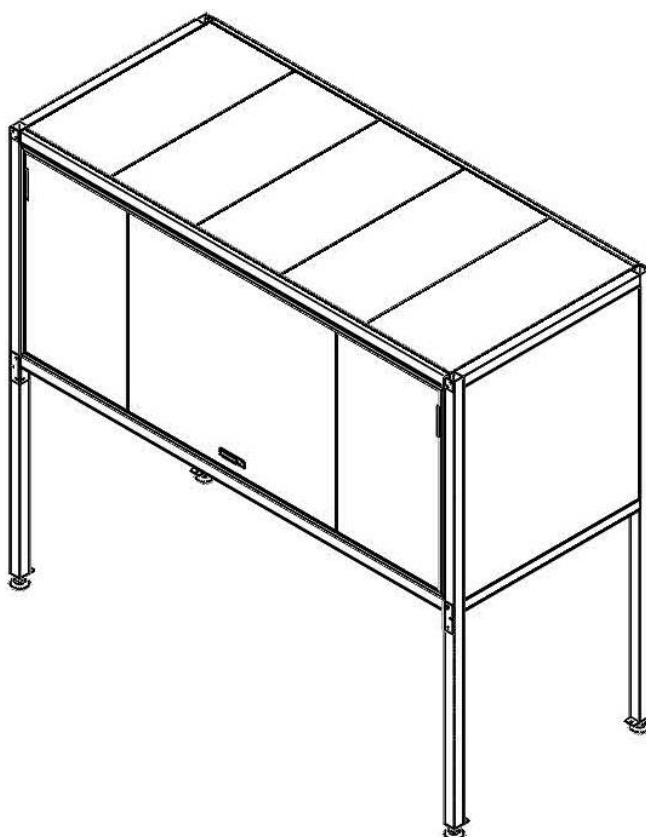







Product Feature & Specification

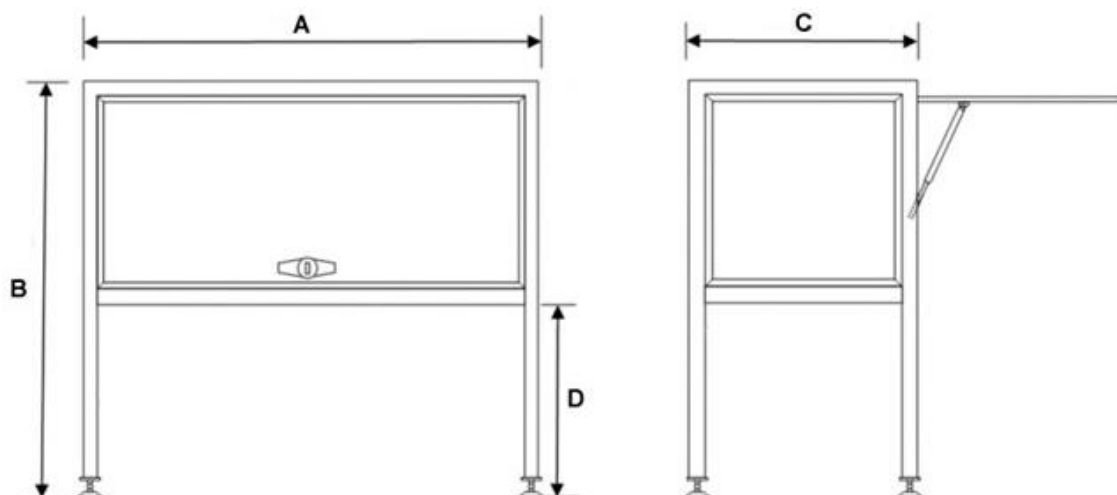




- * SKU: OBSL24
- * Material: Cold Rolled Steel & Galvanised Sheet
- * 2 people recommended for installation
- * Adjustable Feet
- * 3-point lock for extra security
- * Dimensions: 2500(A) x (2000-2300) (B) x 1000(C) x (1000-1300) (D)mm
- * Storage Capacity: 2.5 cubic metres
- * Before installation measure the height of your vehicle, and take ceiling height into consideration, to ensure that you can assemble the unit to the correct height

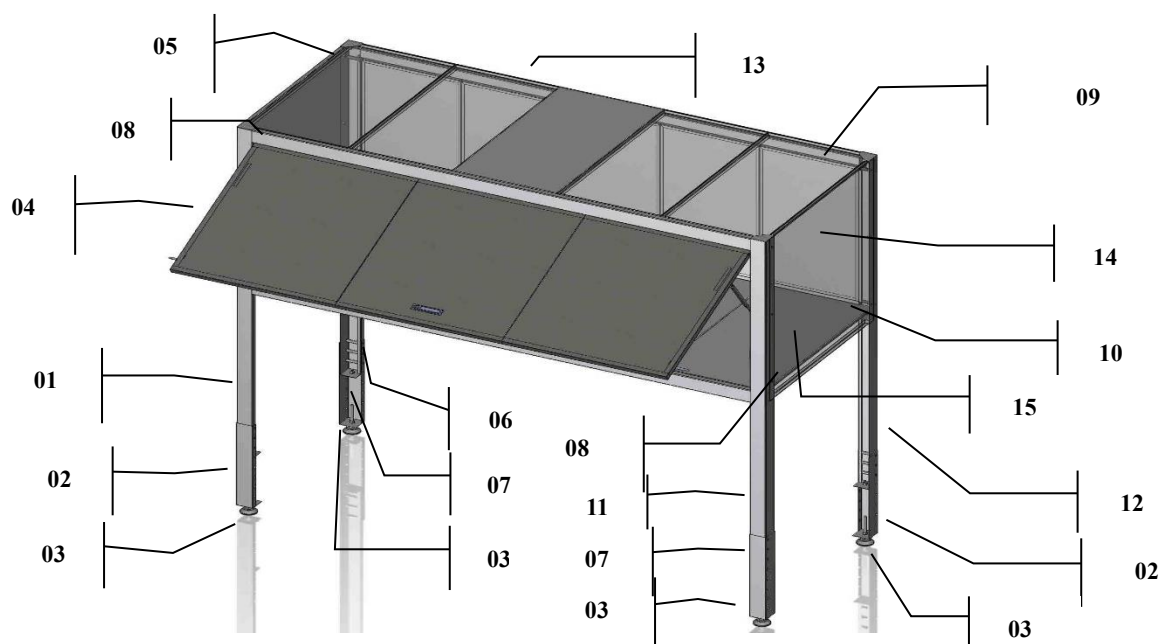



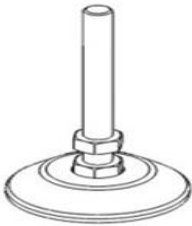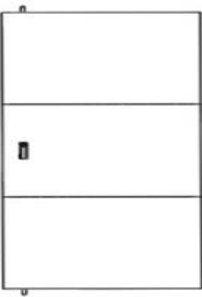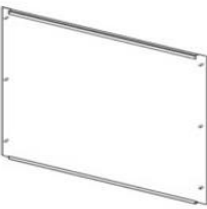


Parts Drawing



NO.	01	02	03	04	05
Drawing					
DESC/QTY	Front Left leg/1	Adjustable Leg A/2	Height Adjustable Foot M12 /4	Door Plate/1	Side Plate/2


NO.	06	07	08	09	10
Drawing					
DESC/QTY	Back Left leg/1	Adjustable Leg B/2	Front Beam /2	Back top beam/1	Back bottom beam/1

NO.	06	07	08	09	10
Drawing					
DESC/QTY	Back Left leg/1	Adjustable Leg B/2	Front Beam /2	Back top beam/1	Back bottom beam/1

Installation Instructions

Step 1


- ① Read instructions from start to finish for assembly.
- ② It is recommended that you measure the height of your vehicle and take into consideration the height of the ceiling before assembling and ensure that it is the right height for your vehicle as it may be difficult to change the height after it is assembled.
- ③ Assemble parts 01, 11 and 08 together using the M8 nuts provided as shown.
- ④ Connect with M10 bolts and nuts for parts 11, 07, 01, 02.

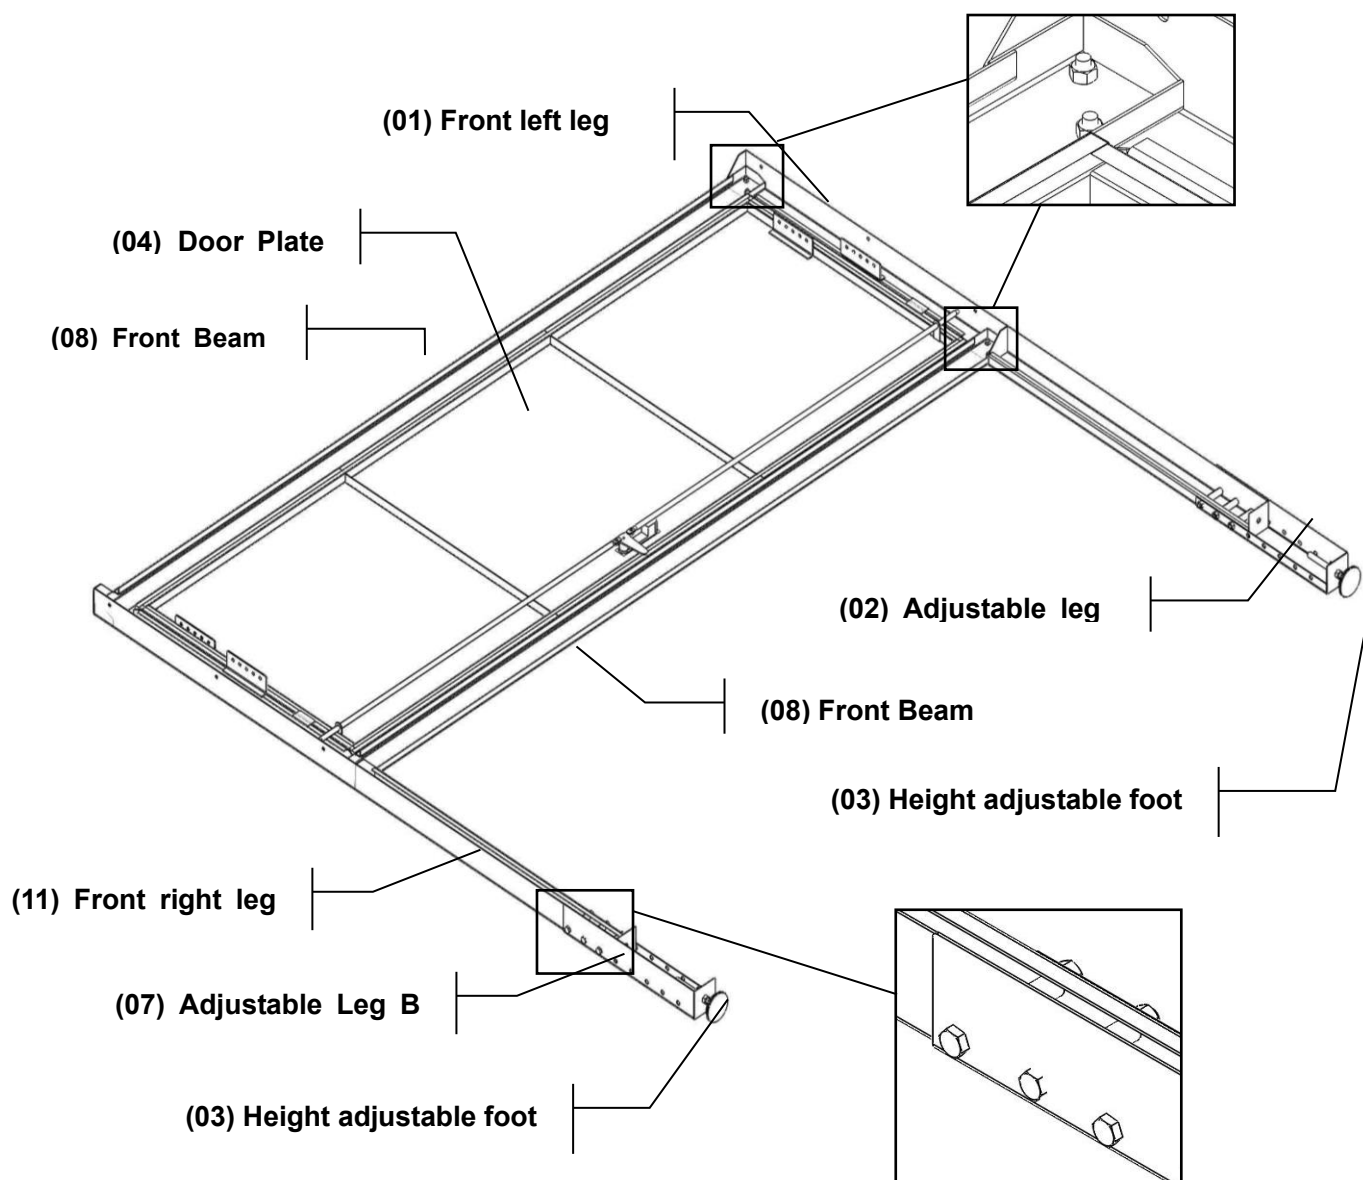

Step 2


- ① Assemble back beams and legs using M8 nuts provided (parts 09, 10, 06, 12).
- ② Connect with M8 bolts and nuts for parts 12, 02, 06, 07.

Note: For most sedan vehicles, the third hole counting from bottom of feet up will be suitable height. For higher vehicle such as four wheel drives, utes, fourth hole counting from feet up will be suitable height. Again, please measure and double check vehicle bonnet height and ceiling height before assembly. Black rubber feet can be twisted and give a little extra height too.

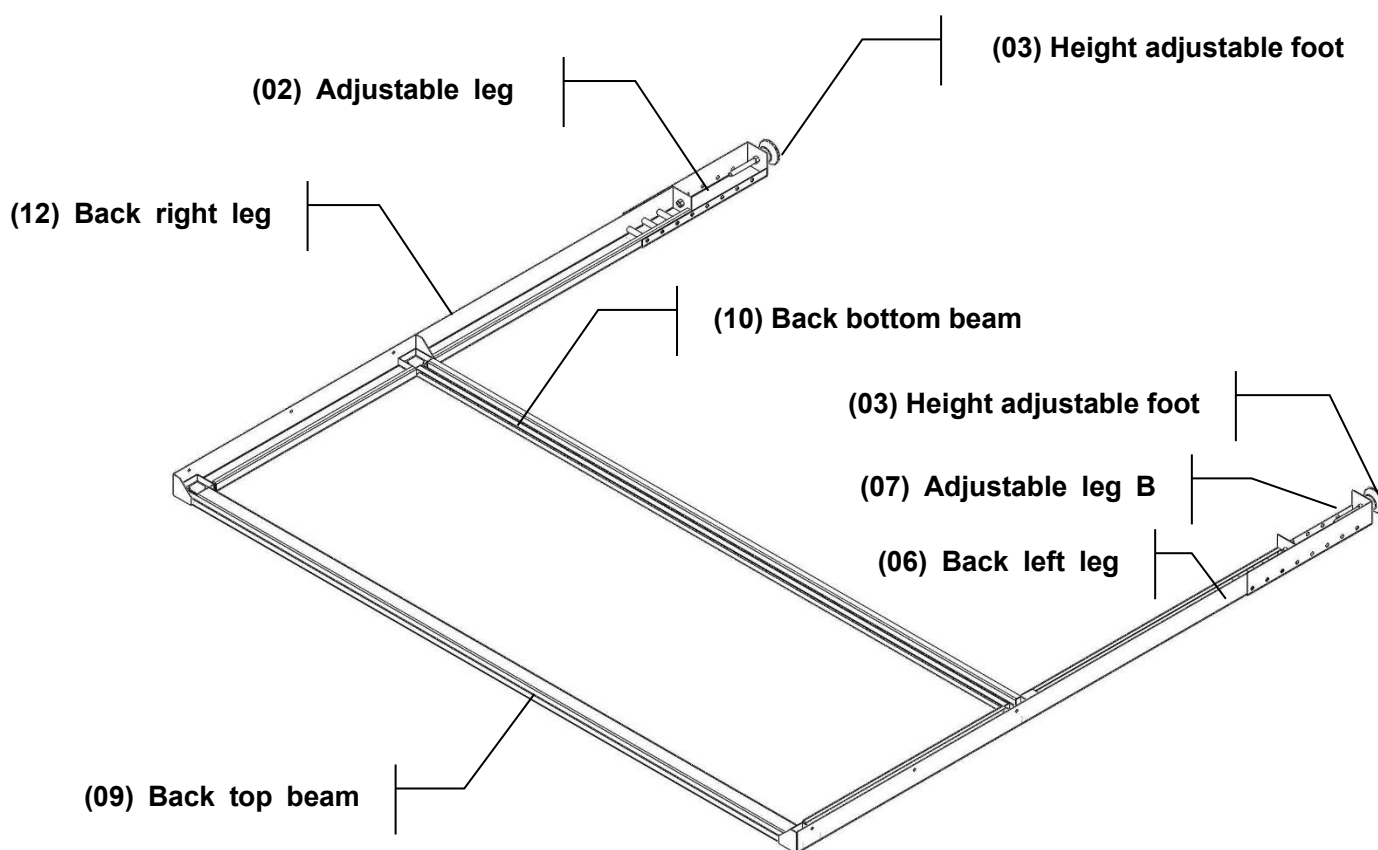

Step 3


Stand the front and back assembled frames up, please have 2 people doing this, and put the 2 x side panels on as per drawing , using the M8 nuts provide.

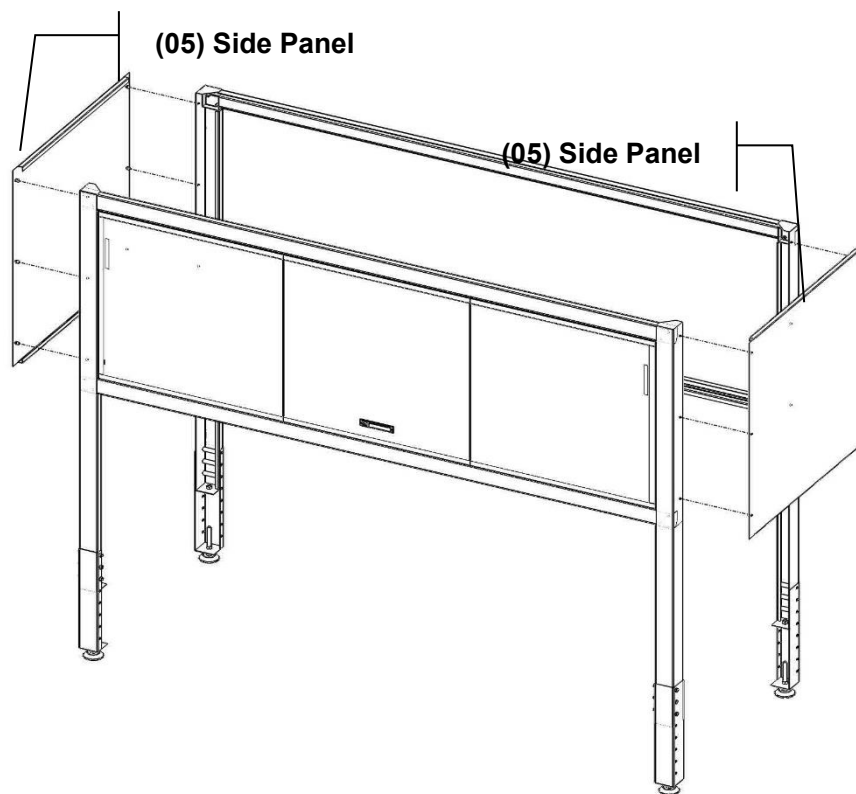

Step 4

Install top panels (13), back panels (14) and bottom panels (15) as drawing shows below.

IMPORTANT: Please use the screws provided in the kit to fix each panel, do not use your own screws.

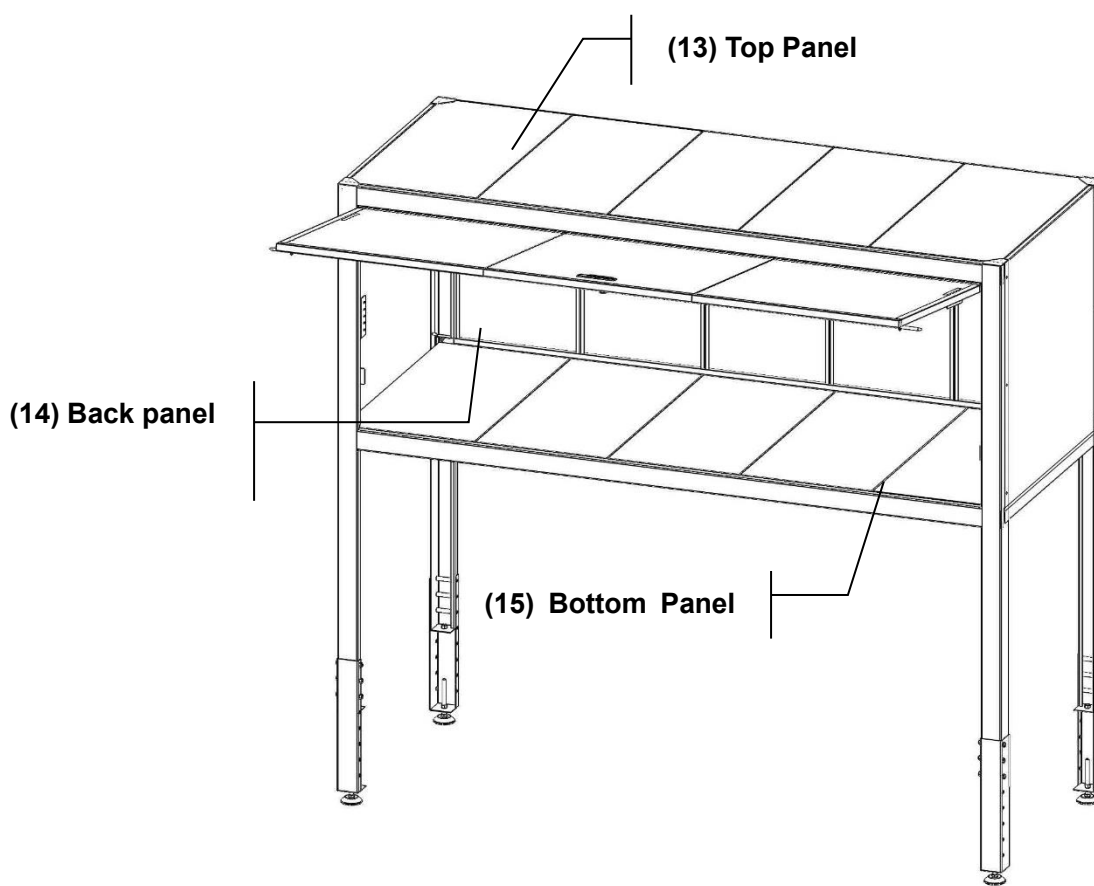


Step 5

Installation of Gas Struts

Hold door open and install the gas struts provided as per the diagram below.

Please note: Ensure that gas struts are installed onto the same holes on either side.

E.g. If you are installing the gas struts in the third hole in the door ensure that it is also in the third hole on the hinge side, otherwise the door will not shut properly resulting in damage to the unit.

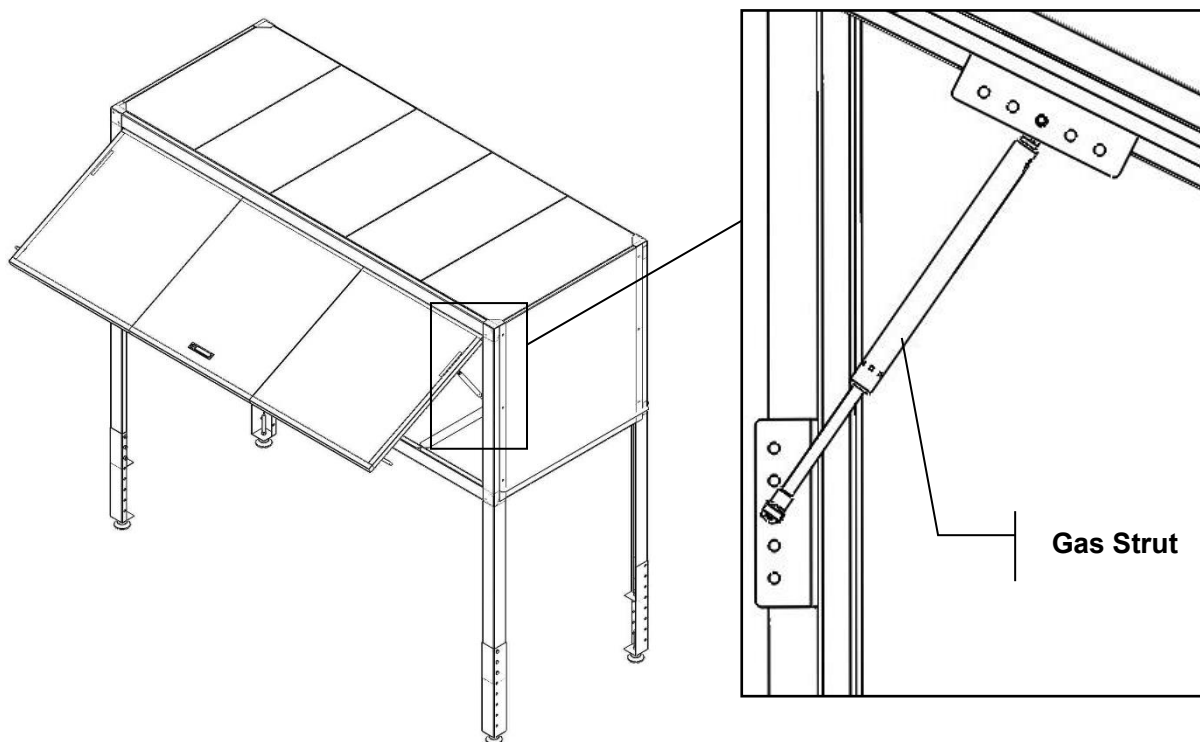

IMPORTANT: Please ensure that all parts are assembled correctly according to instructions, check legs are levelled and unit is stable, before putting anything in the locker or drive your car under the unit, to prevent any possible issue or damage.