

## Product Information & Installation Guide

### The Truck Wheel Stop (Concrete Surfaces)



**Australian Compliant - Complies with AS2890.1:2004.**

#### **Specifications**

SKU: WSTRUCK

Description: Truck Wheel Stop

Material: Solid Recycled Plastic

Finish: Yellow Reflective Panels

Height: 150mm

Width: 150mm

Length: 1250mm

Weight: 20 kg

5 year warranty


### Installation Guide

#### You will need:

- A hammer drill with a 12mm masonry drill bit
- The 4 x 12mm x 180mm Concrete Screw Anchors supplied with the wheel stops.
- A 19mm socket
- A hand broom or industrial vacuum (optional)

## **What to do:**

1. Read all the instructions from beginning to end first.

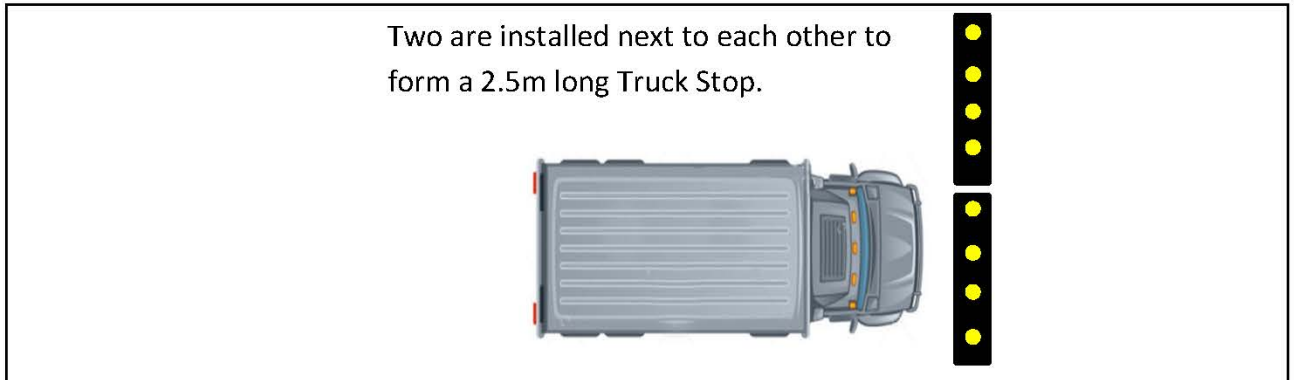

2. As every truck has varying dimensions, installation of the truck stops and the distance from kerbs, walls and other obstacles will be individual for every circumstance. Ensure you keep this in mind when determining where your truck wheel stops will be placed.
3. Put the wheel stop where it will go and using your hammer drill, drill a guide hole in the concrete through each hole in the wheel stop using the 16mm masonry drill bit. (This is to mark the surface so that you know where to continue to drill).
4. Remove the wheel stop and brush or vacuum away the concrete dust.
5. Continue to drill each guide hole to an approximate depth of 120mm.
6. Brush or vacuum away the concrete dust.
7. Place the wheel stop over the holes, line up and place the supplied Dyna bolt through the wheel stop into the pre-drilled holes.
8. Use your 19mm socket to tighten the Dyna bolt and secure the wheel stops to the surface.

For a seamless installation, ensure your wheel stops are placed on a flat surface.

***Safety Xpress recommends you put the safety of yourself and others first when installing your wheel stops. Please be mindful of using and wearing the correct safety gear.***