

## Product Information & Installation Guide

### Wheel Stops 900mm (Asphalt/Gravel Surfaces)



**Australian Compliant - Complies with AS2890.1:2004.**

#### Specifications

SKU: WSTOP900

Description: Rubber Wheel Stop

Material: Rubber

Finish: Yellow Reflective Panels

Height: 100mm

Length: 900mm


Weight: 11kg

1 Year Warranty

### Installation Guide



#### You will need:

- A hammer drill with a 14mm masonry drill bit
- The road spikes supplied with the wheel stops.
- A hammer
- A hand broom or industrial vacuum (optional)

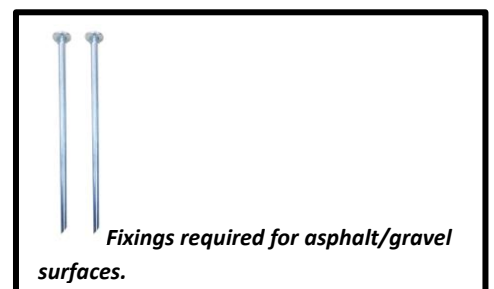

## What to do:

1. Read all the instructions from beginning to end first.
2. Determine exactly where the wheel stop will be placed. See our handy chart below for the Australian Standards (AS2890.1:2004)

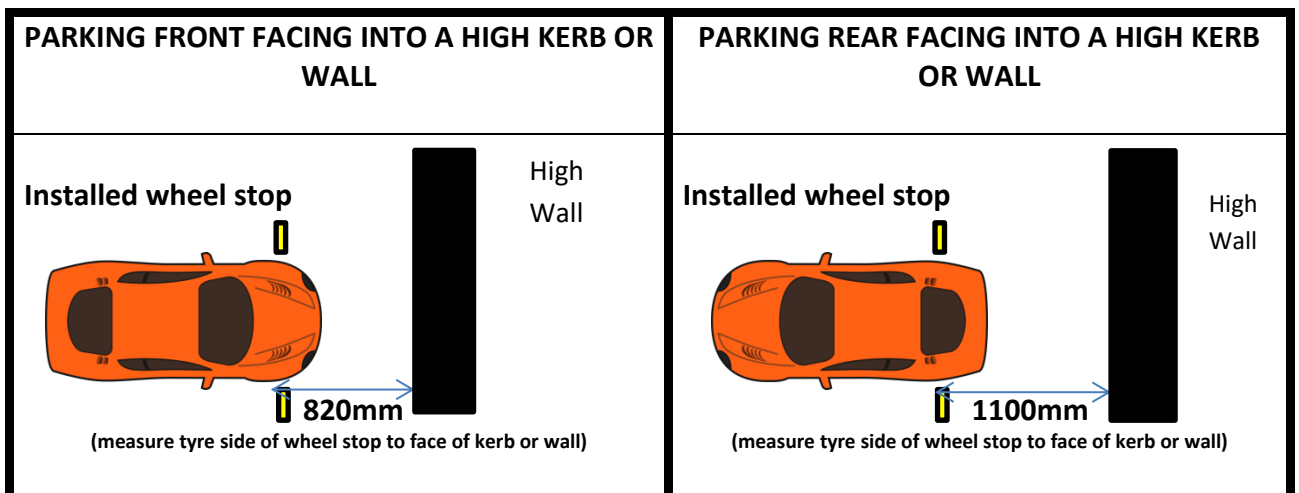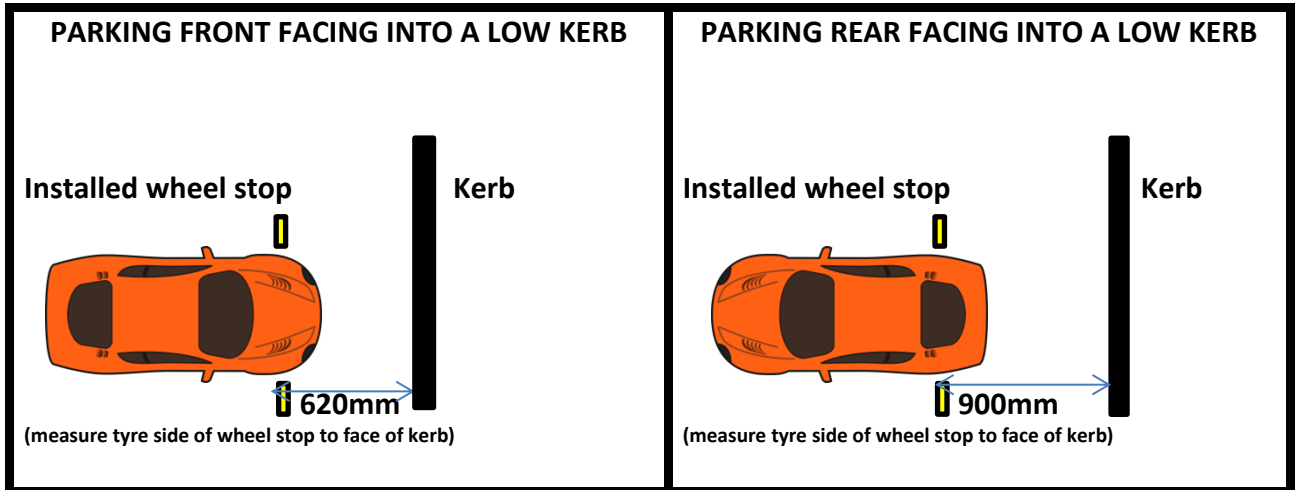

3. Put the wheel stop where it will go and using your hammer drill, drill a guide hole in the concrete through each hole in the wheel stop using the 14mm masonry drill bit. (This is to mark the surface so that hammering is made easier).
4. Remove the wheel stop and brush or vacuum away the dust if required.
5. Continue to drill each guide hole to an approximate depth of 120mm.
6. Place the wheel stop over the holes, line up and hammer the supplied road spikes through the wheel stop and into the road surface.

For a seamless installation, ensure your wheel stops are placed on a flat surface.

*Safety Xpress recommends you put the safety of yourself and others first when installing your wheel stops. Please be mindful of using and wearing the correct safety gear.*