
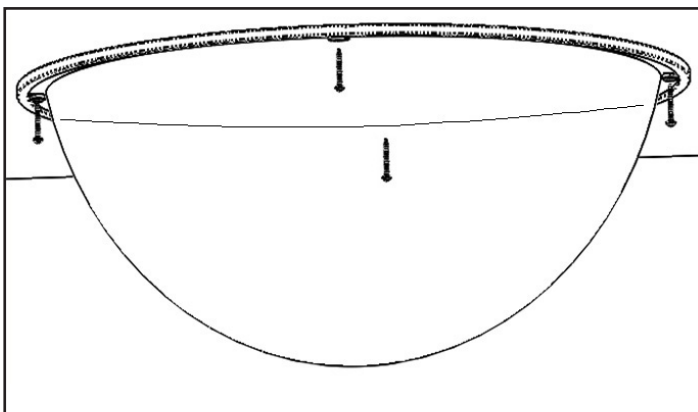


## Full Dome Mirror

### Installation Guide

1. Find a suitable installation location, it is recommended you install Full Dome Mirror onto your ceiling, use it as a security measure.
2. Mark where you would like Full Dome Mirror to be installed with a pencil
3. Use a suitable size drill bit, drill holes into ceiling
4. Put plastic plug through holes along rubber edging, gently tap plugs in with a hammer
5. You can now drive the screws through to secure dome mirror in place


Alternatively, you can use glue adhesive along rubber edging to affix product to ceiling

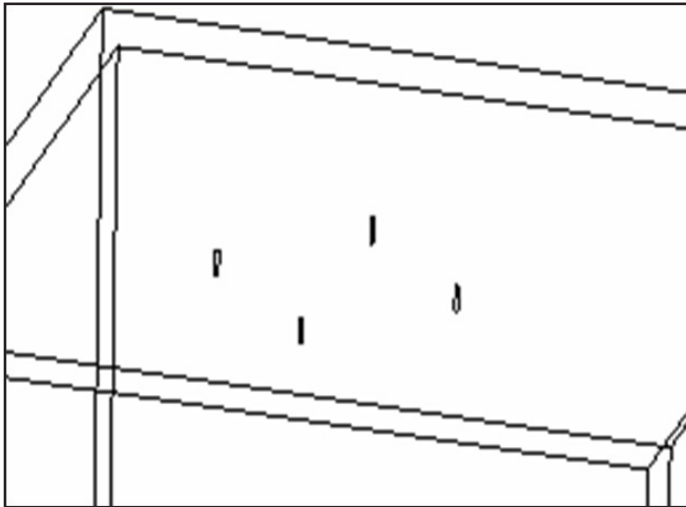

### Care Instructions

Please remove protective film AFTER you have installed the mirror in place.

We recommend using a soft cloth dampened with water for cleaning. DO NOT use any corrosive or harsh cleaning chemical on surface.

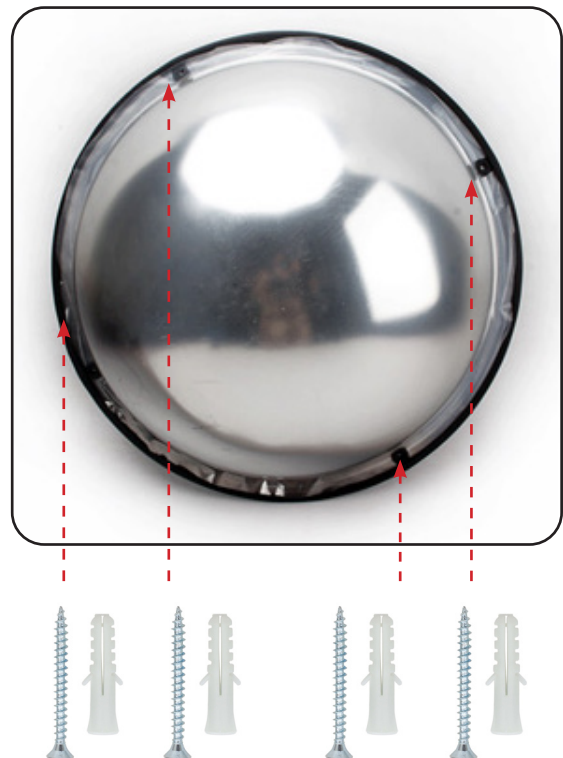

Note:

4 x fixing holes on Full Dome Mirror

