
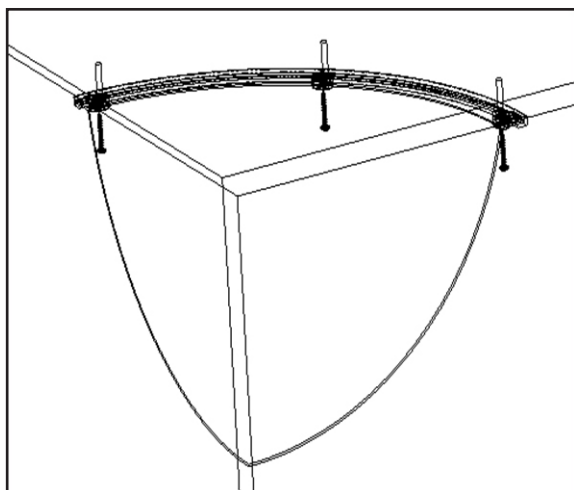


Quarter Dome Mirror

Installation Guide

1. Find a suitable installation location, it is recommended you install Quarter Dome Mirror at corner of a room, use it as a security measure.
2. Mark where you would like Quarter Dome Mirror to be installed with a pencil
3. Use a suitable size drill bit, drill holes into ceiling
4. Put plastic plug through holes along rubber edging, gently tap plugs in with a hammer
5. You can now drive the screws through to secure quarter dome mirror in place


Alternatively, you can use glue adhesive along rubber edging to affix product to ceiling

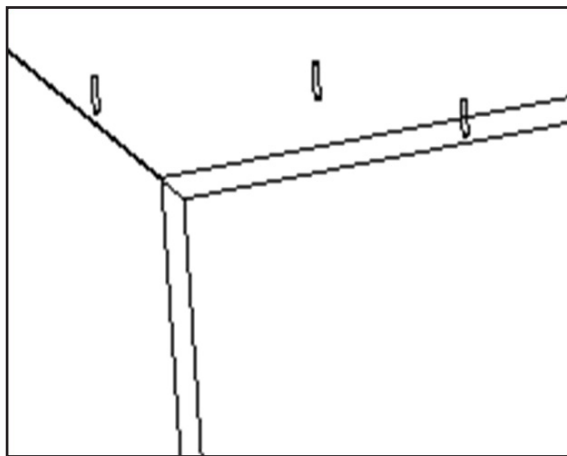

Care Instructions

Please remove protective film AFTER you have installed the mirror in place.

We recommend using a soft cloth dampened with water for cleaning. DO NOT use any corrosive or harsh cleaning chemical on surface.

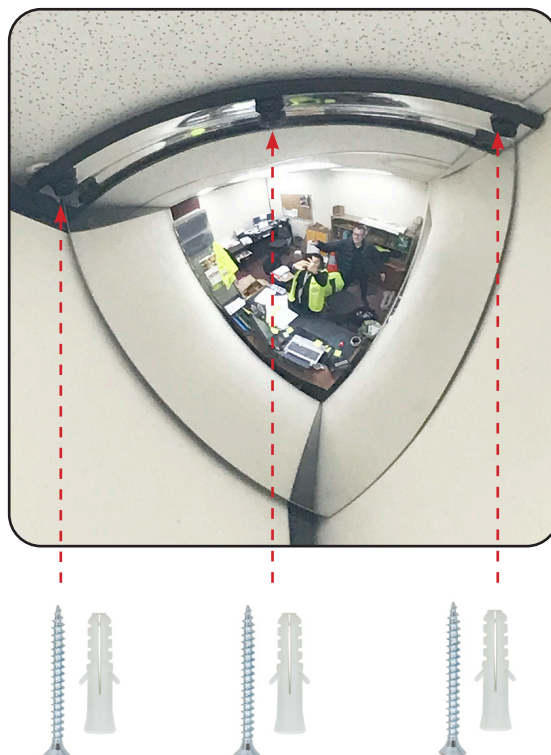

Note: 2 x fixing holes on QDOME300
3 x fixing holes on QDOME600

